

APPLICATION FOR OSHPD PREAPPROVAL

OFFICE OF STATEWIDE HEALTH PLANNING AND DEVELOPMENT **FACILITIES DEVELOPMENT DIVISION**

OFFICE USE ONLY

OF MANUFACTURER'S CERTIFICATION (OPM) APPLICATION #: OPM-0255-13
OSHPD Preapproval of Manufacturer's Certification (OPM)
Type: ☐ New ☐ Renewal ☐ Update to Pre-CBC 2013 OPA Number:
Manufacturer Information
Manufacturer: APC by Schneider-Electric
Manufacturer's Technical Representative: Greg Ivey
Mailing Address: 801 Corporate Centre Drive
Telephone: 636-300-2300 Email: greg.lvey@schneider-electric.com
Product Information
Product Name: Netshelter SX
Product Type: Network Equipment Cabinet
Product Model Number: Netshelter SX Cabinet Series (AR3abcXXXX & AR9abcXXXX)
Data center network equipment cabinet. See OPM drawing sheet SK1a for specific models included in the OPM. Data center network equipment cabinet. See OPM drawing sheet SK1a for specific models
Applicant Information
Applicant Company Name: APC by Schneider-Electric LDING
Contact Person: Greg Ivey
Mailing Address: 801 Corporate Centre Drive
Telephone: 636-300-2300 Email: greg.ivey@schneider-electric.com
I hereby agree to reimburse the Office of Statewide Health Planning and Development review fees in accordance with the California Administrative Code, 2016.
Signature of Applicant: Date: 4-10-18
Title: Engineering Manager – Rack Systems Company Name: Schneider-Electric

"Access to Safe, Quality Healthcare Environments that Meet California's Diverse and Dynamic Needs"





OFFICE OF STATEWIDE HEALTH PLANNING AND DEVELOPMENT FACILITIES DEVELOPMENT DIVISION

Registered Design Professional Preparing Engineering Recommendations
Company Name: RMJ
Name: Jayson E. Haines California License Number: 4801
Mailing Address: 241 Joaquin Avenue, San Leandro, CA 94577
Telephone: 510-991-0977 Email: jhaines@rmjse.com
OSHPD Special Seismic Certification Preapproval (OSP)
 □ Special Seismic Certification is preapproved under OSP- (Separate application for OSP is required) □ Special Seismic Certification is not preapproved
Certification Method(s)
☐ Testing in accordance with: ☐ ICC-ES AC156 ☐ FM 1950-16 ☐ Other* (Please Specify):
OPM-0255-13
*Use of criteria other than those adopted by the California Building Standards Code, 2016 (CBSC 2016) for component supports and attachments are not permitted. For distribution system, interior partition wall, and suspended ceiling seismic bracings, test criteria other than those adopted in the CBSC 2016 may be used when approved by OSHPD prior to testing.
Analysis DATE: 06/12/2018
Experience Data Combination of Testing Analysis and/or Experience Data (Please Specify)
Combination of Testing, Analysis, and/or Experience Data (Please Specify):
List of Attachments Supporting the Manufacturer's Certification
☐ Test Report ☐ Drawings ☐ Calculations ☐ Manufacturer's Catalog ☐ Other(s) (Please Specify):
OFFICE USE ONLY – OSHPD APPROVAL VALID FOR CBC 2016 & ALL PRE-2016 CODE BASED PROJECTS
Signature: Date: 06-12-2018
Print Name:
Title: SSE
Condition of Approval (if applicable):

"Access to Safe, Quality Healthcare Environments that Meet California's Diverse and Dynamic Needs"






Page 2 of 13



Robinson Meier Juilly & Associates Principals Peter Robinson, S.E. Jayson E. Haines, S.E.

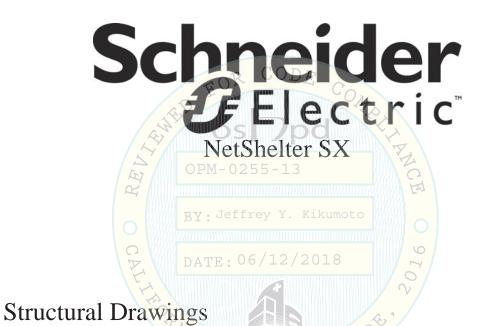

For Seismic Supports and Attachments

Prepared for:

Schneider Electric February 14, 2017 Revised June 11, 2018 RMJ Job No. 15262



241 Joaquin Avenue San Leandro, CA 94577 (510) 991-0977

GENERAL NOTES

DESIGN

- 1. This OSHPD pre—approval of Manufacturer's Certification (OPM) based on the 2016 CBC. The demand (Design) forces for use with this OPM shall be based on the 2016 CBC.
- 1. This Document may only be used with the express written consent of the manufacturer listed below for the specific project site and installation location. This document is invalid without such consent.

Design Criteria:

Importance Factor1.5

Maximum Value of $S_{DS}=2.0$, $a_P=1.0$, $R_P=2.5$, $\Omega_0=2.5$ (As req'd for anchorage to concrete), z/h=0.0 (Concrete slab on grade), z/h<=0.5 for raised floor in lower half of building height. Forces per ASCE 7-10 section 13.3.1, Equations 13.3-1, 13.3-2 & 13.3-3.

Note: For Site Specific Sps, SEOR shall determine appropriate value to be utilized.

<u>Dimensions</u>: Refer to rough concrete surfaces, or top of slab, unless otherwise indicated.

<u>Fasteners Expansion Anchors:</u>

Anchor Diameter		Min. f'c (psi)	Anchor Type	ICC Report No.	h _{ef} Min. Embed.	Min. Spacing		Min. Conc. Thickness	Torque Test	Direct Tension
1/2"	Normal Weight	3,000	Hilti Kwik Bolt TZ CS	ESR-1917	2"	6"	24"	4"	40 FT-LB	1605 lb

This pre-approval allows for up to a maximum of two adjacent concrete slab edges, 24" away minimum. See detail below for additional minimum allowable concrete edge distances. Testing of expansion anchors per 2016 CBC, 1913A.7: After a minimum of 24 hours have elapsed since installation, bolt testing shall be done in the presence of the special inspector and a report of the test results shall be submitted to SEOR and building code enforcement agency. Testing may be, direct pull tension test or torque test of at least 50% of the anchors.

Test Loads:

Drawing package is in accordance with the 2016 California Building Code. The details are applicable to locations in California where $S_{DS} <= 2.0$ and z/h <= 0.5. For site specific S_{DS} , SEOR shall determine appropriate value to be utilized.

Anchorage forces shown on the drawings are factored loads that are associated with strength design.

This pre-approval only applies to the supports & attachments of the cabinet unit to the structure.

RMJ

Juilly & Associates

Structural Engineers 241 Joaquin Avenue

San Leandro CA 94577 510.991.0977 SCHNEIDER ELECTRIC NETSHELTER SX

D. 12/31/2019

OSHPD CABINET
SUPPORTS AND ATTACHMENTS

Signed by JEH Date 4/9/2018

Job No. 15262

Sheet No.



RACK MATRIX (Netshelter SX Series)

					Anch	or fo	orces	(lbs)	_
					z/h	=0.0	z/h<	<=0.5	
Model #	WidthXDepth	Height	U ref. per EIA-310	Weight	Tu	V _u	Tu	⊳ 2	AR
		1198	24	196	1220	440	625	660	
		1991	42	275	1220	440	625	660	
		2124	45	300	1220	440	625	660	
	600x1070	2258	48	327	1220	440	625	660	
		2347	50	196	1220	440	625	660	
		2436	52	367	1220	440	625	660	
		2525	54	389	1220	440	625	660	
		1198	24	212	1220	440	625	660	
		1991	42	295	1220	440	625	660	
		2124	45	322	1220	440	625	660	
	600x1200	2258	48	350	1220	440	625	660	
		2347	50	372	1220			660	
		2436	52	394	1220			660	
		2525	54	417	1220	440	625	660	
		1198	24	235	1220	440	625	660	7
		1991	42	335	1220	· ·	_	660	/E
	750×1070	2124	45	365	1220			660	
		2258	48	398		440		660	MMM
		2347	50	422	1220			660	
		2436	52	447	1220			660	
		2525	54	474	1220			660	
AR3abcXXXX	750x1200	1198	. 24	251	1220			660	
AR9abcXXXX		1991	42	355	1220			660	
		2124	5745	387	1220			660	3
		2258	48	422	1220			660	TUBBAN
		2347	50	447	1220			660	YVIAAA
		2436	52	474	1220			660	
		2525	54	502	1220			660	Kl
		1198	24	249	1220			660	
	800x1070	1991	42	355	1220			660	
		2124	45	387	1220			660	100
		2258	48	422	1220			660	20
		2347	50	447	1220			660	
		2436	52	474	1220			660	
		2525	54	502	1220			660	
		1198	24	265	1220			660	
	800x1200	1991	42	375	1220			660	
		2124	45	409	1220			660	
		2258	48	446	1220			660	Andlill
		2347	50	472	1220			660	- TT
		2436	52	501	1220			660	TIA
	I	2525	54	531		440		000	

—Maximum anchor value for either a single unit or set of ganged units. 600 mm units must ganged at ground floor; Single 600mm units not allowed at ground floor.

Hoor; Single	600mm units not allowed at ground floor.
AR3abc and Al	9abc XXXXXX Series cabinets defined by:
a	denotes depth: 1 or 2
b	denotes width: 0 or 1 23.6" (600mm) wide 4 or 5 29.5 (750 mm) wide 8 31.5" (800 mm) wide
E Co	denotes height: 0, 1 or 2 78.4" (1991 mm) high for 42U 4 47.2" (1198 mm) high for 24U 5 83.6" (2124 mm) high for 45U 6 92.4" (2347 mm) high for 50U 7 88.9" (2258 mm) high for 48U 8 95.9" (2436 mm) high for 52U 9 99.4" (2525 mm) high for 54U
III N. () M	Г. 740

Note: U designations are per EIA-310
EIA is Electronic Industries Association



1 0

No. 480 Exp. 12/31/2

U reference is depth of cabinet per Electronic Industries Alliance.

FOR PLAN REFERENCE, SEE SHEET SK4

RMJ

Juilly & Associates

Structural Engineers

241 Joaquin Avenue San Leandro CA 94577 510.991.0977 SCHNEIDER ELECTRIC NETSHELTER SX

OSHPD CABINET SUPPORTS AND ATTACHMENTS

Signed by JEH Date 4/9/2018


Job No. 15262

Sheet No.



RESPONSIBILITY OF STRUCTURAL ENGINEER OF RECORD

- 1. Verify that the concrete meets the requirements of the applicable ICC ESR.
- 2. Verify that the anchors are at an adequate distance from any slab opening or edges.
- 3. Verify that all new or existing anchors are at an adequate distance from the anchors shown in this pre—approval. The SEOR shall verify that there is no adverse interaction where other anchors are within 18" or 6 $h_{\rm ef}$ from the unit's anchors.
- 4. Verify the adequacy of the structure to support the weight and forces shown in this pre—approval in addition to all other weights and forces that are imposed on it.
- 5. Provide any supplementary structure required for strength and stability.
- 6. Verify that the installation is in conformance with the 2016 CBC and with the notes and details shown in this pre—approval. Verify that the equipment's actual weight, center of gravity location, anchor locations, anchor details and the material and gage of the unit where attachments are made conform with the information shown in this pre—approval.
- 7. If content weight is less than 33 pcf, maximum live loads permitted shall be posted.

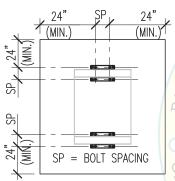

TYPICAL CONCRETE EDGE DETAIL

- Avoid damaging existing steel reinforcing in concrete slab when installing expansion anchors.
- Provide for full thread engagement of nut & washer.

Acceptance Criteria for Expansion Anchors:

Direction Tension Test:

Anchor shall maintain and hold test load of minimum (15) seconds & shall exhibit no discernable movement during the tension test, e.g., as evidenced by loosening of the washer under the nut.

Torque Test:

The applicable torque must be achieved within the following limits: wedge type: 1/2 turn of the nut.

Acceptance Criteria for Bolts thru Concrete on Metal Deck:

- A. Bolts shall be torqued by turns of the nut, after snug tight condition is achieved. Snug tight condition is defined as the tightness required to bring the connected plies into firm contact.
- B. Thru bolt holes size shall be 1/16" larger than bolt size for concrete. C: Thru bolts in concrete shall receive Special Inspection and Testing (Through bolts with steel to steel connection in tension do not require tension testing) in accordance with requirements for post—installed

concrete anchors.

*If any anchor fails testing, all anchors of the same type shall be tested, which are install by the same trade, not previously tested until twenty (20) consecutive anchors pass, then resume initial test frequency.



RMJ

Juilly & Associates

Structural Engineers

241 Joaquin Avenue San Leandro CA 94577 510.991.0977 SCHNEIDER ELECTRIC NETSHELTER SX

OSHPD CABINET SUPPORTS AND ATTACHMENTS

Signed by JEH


Date 4/9/2018

Sheet No.

(SK2)

Job No.

15262

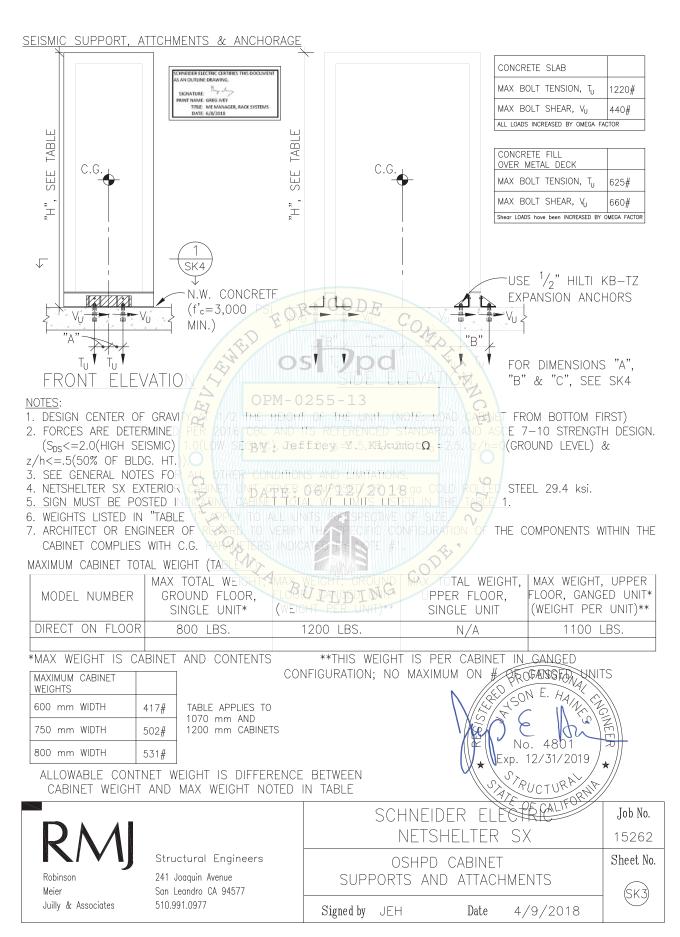


NOTES:

*SEE Rack Matrix on sheet SK1a for all possible dimensions. Design based on AR3 & AR9 series rack. *INTERNAL and EXTERNAL BRACKETS SHALL BE INSTALLED FOR OSHPD PROJECTS.

CONDITION SCHEDULE

CONDITION	<u>SEE</u>
CONCRETE SLAB	SK6

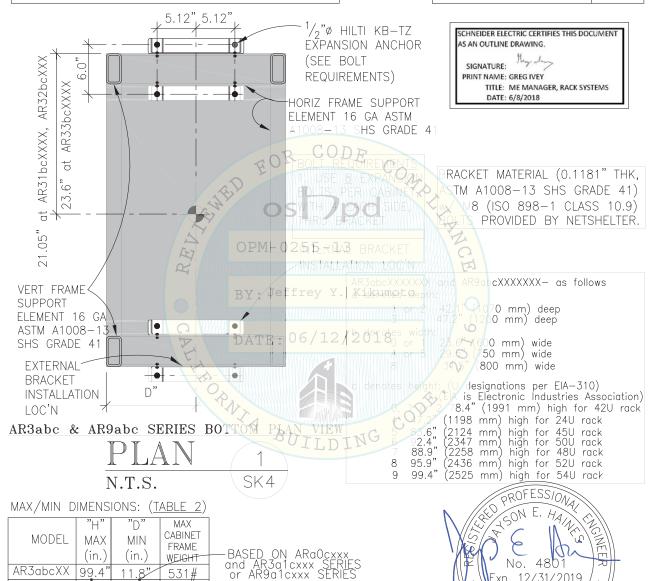

	AR3ab9xxx SERIES or AR9ab9xxx SERIES	OF CALIFO	
		SCHNEIDER ELECTRIC	Job No.
RM		NETSHELTER SX	15262
	Structural Engineers	OSHPD CABINET	Sheet No.
Robinson Meier	241 Joaquin Avenue San Leandro CA 94577	SUPPORTS AND ATTACHMENTS	(SKV)
Juilly & Associates	510.991.0977	Signed by JEH Date 4/9/2018	

AR9abcXX 99,4"

<u>11.8"</u>

531#

BASED ON

NOTES:

*SEE Rack Matrix on sheet SK1a for all possible dimensions. Design based on AR3 & AR9 series rack. *INTERNAL and EXTERNAL BRACKETS SHALL BE INSTALLED FOR OSHPD PROJECTS.

CONDITION SCHEDULE


CONDITION	<u>SEE</u>
CONCRETE SLAB	SK6
CONCRETE FILL OVER METAL DECK	SK7

INSTALLATION FOR THE FOLLOWING CONDITIONS:

 SEE BOLT REQUIREMENTS ON SK4 FOR ANCHORAGE REQUIREMENTS.

CONCRETE SLAB		CO OVI		
MAX BOLT TENSION, T _U	1220#	MA		
MAX BOLT SHEAR, V_U	440#	MA		
ALL LOADS have been INCREASED BY OMEGA FACTOR				

CONCRETE FILL OVER METAL DECK	
MAX BOLT TENSION, T _U	625#
MAX BOLT SHEAR, V _U	660#
Shear LOADS have been INCREASED BY C	MEGA FACTOR

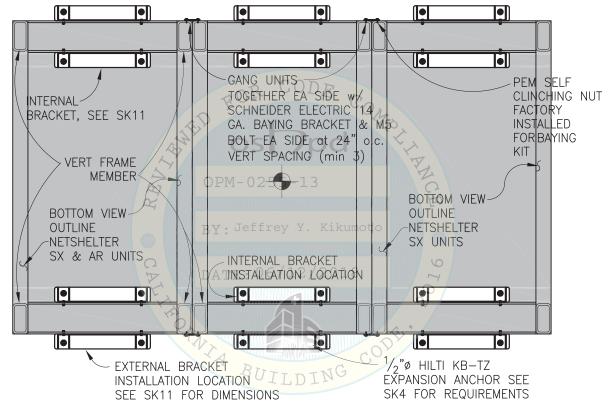

GANG UNIT BOTTOM PLAN VIEW (3 UNITS OR MORE GANGED TOGETHER)

SCHNEIDER ELECTRIC CERTIFIES THIS DOCUMENT
AS AN OUTLINE DRAWING.

SIGNATURE:
PRINT NAME: GREG IVEY
TITLE: ME MANAGER, RACK SYSTEMS
DATE: 6/8/2018

PLAN 1 N.T.S. SK5



RMJ

Juilly & Associates

Structural Engineers

241 Joaquin Avenue San Leandro CA 94577 510.991.0977 SCHNEIDER ELECTRIC NETSHELTER SX

OSHPD CABINET SUPPORTS AND ATTACHMENTS

Signed by JEH

Date 4/9/2018


Job No. 15262

Sheet No.



SCHNEIDER ELECTRIC CERTIFIES THIS DOCUMENT
AS AN OUTLINE DRAWING.

SIGNATURE:
PRINT NAME: GREG IVEY
TITLE: ME MANAGER, RACK SYSTEMS
DATE: 6/8/2018

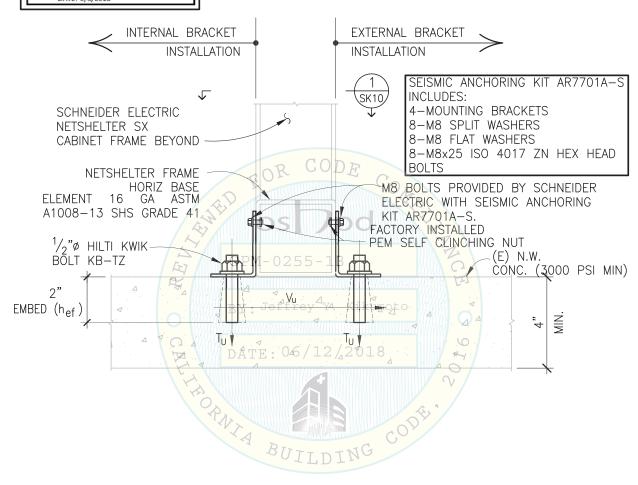







Juilly & Associates

Structural Engineers

241 Joaquin Avenue San Leandro CA 94577 510.991.0977 SCHNEIDER ELECTRIC NETSHELTER SX

OSHPD CABINET
SUPPORTS AND ATTACHMENTS

Signed by JEH Date 4/9/2018

Job No. 15262

Sheet No.



SCHNEIDER NETSHELTER SX UNIT CABINET NOTES:

- 1. CABINET COVER GAGE THICKNESS SHALL NOT BE LESS THAN 16 ga.
- 2. BASE MATERIAL SHALL BE COLD ROLLED STEEL 29.4 ksi.
- 3. THE STRUT(S) AND ITS ATTACHMENTS ARE DESIGNED TO RESIST A LOAD NOT LESS THAN $V_{U\ STRUT}$ IN COMBINATION WITH ALL OTHER LOADS THAT MAY BE PRESENT, WHERE $V_{U\ STRUT}=0.7V_{U\ X}$ (NO. OF ANCHORS ENGAGED BY STRUT), MIN.

SCHNEIDER ELECTRIC CERTIFIES THIS DOCUMENT
AS AN OUTLINE DRAWING.

SIGNATURE:
PRINT NAME: GREG IVEY

TITLE: ME MANAGER, RACK SYSTEMS DATE: 6/8/2018

